

How to connect 6-wire door cord to top circuit board

A 6-wire cord is typically used when using an external device to activate the Open Sesame.

Note: leave any existing red, blue, and black wires for the radio receiver board in these positions, and double-up the wires in the blue and black holes.

