
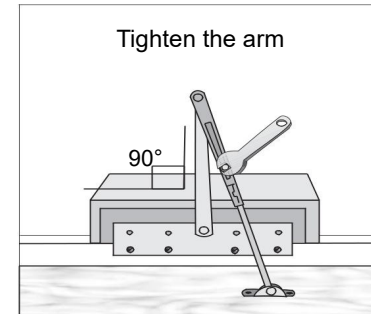
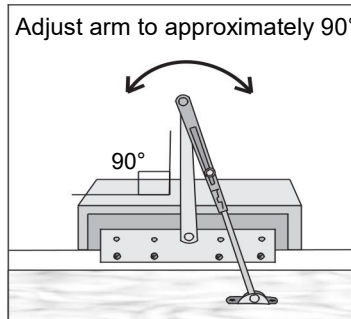
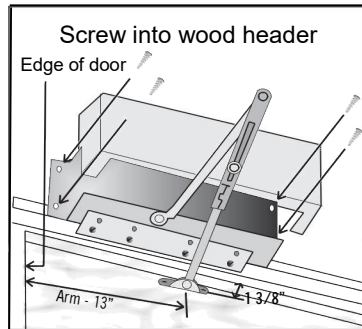
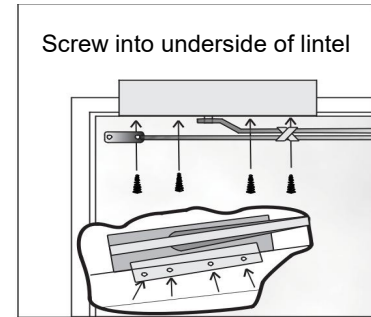
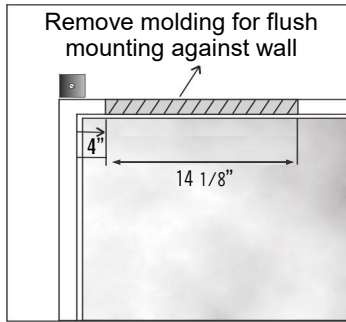


# Lintel Mount Installation Instructions for outward opening doors

**\*Remove cover from operator before beginning installation\***

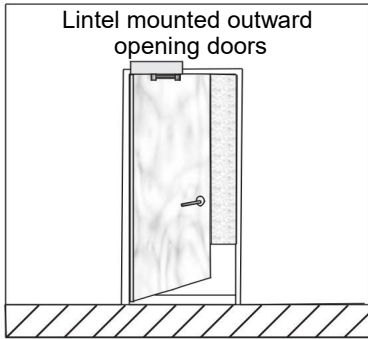

Note: For BOTH Model 133 and Model 233 Operator, mount operator at 4" away from the hinges and mount arm at 13" from hinges.  
After mounting unit, see page 9 and see under the cover for additional instructions.