


REMOTE CONTROL PROGRAMING INSTRUCTIONS FOR THE OPEN SESAME DOOR OPERATOR

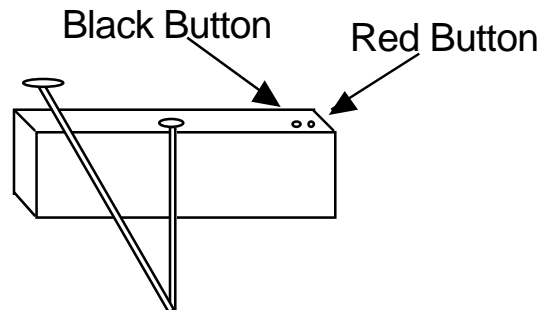

1) Locate the red button on top of the door operator and push it momentarily (1 second).

2a) If using any wheelchair mounted or handheld remote control, or wall pushpad, push and hold the button on the remote control for 4 seconds. Then release and push the remote control button again and the unit should respond.

2b) If using a keyless entry pad, enter the new 4-digit code on the keypad and then hold the "ENTER" button for 4 seconds. Then release and push the "ENTER" button again and the unit should respond. **Note:** The old code will now no longer work.

STEP 2 MUST OCCUR WITHIN 15 SECONDS OF STEP 1.

IF THIS DOES NOT WORK, CALL FOR TECHNICAL ASSISTANCE.

NOTE: IF YOU LOST A REMOTE CONTROL AND NO LONGER WISH IT TO WORK, PUSH AND HOLD THE RED BUTTON FOR 10 SECONDS, THEN REPROGRAM ALL OTHER REMOTE CONTROLS AND KEYPADS.

Open Sesame Door Systems Inc.

1-800-673-6911

9:00 AM - 6:30 PM

(PACIFIC TIME)